
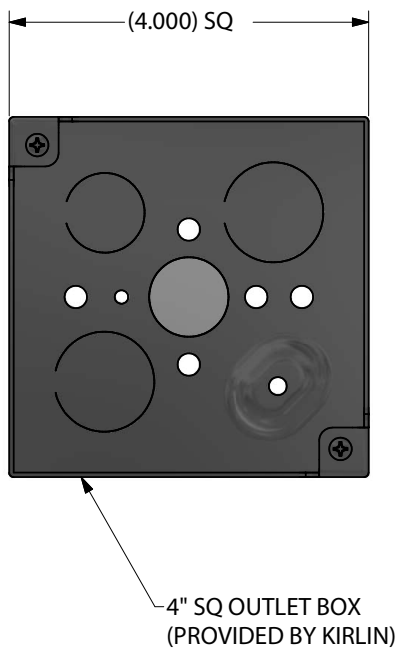


## 3x12 CYLINDER CORD/PENDANT/SURFACE MOUNT INSTALLATION INSTRUCTIONS

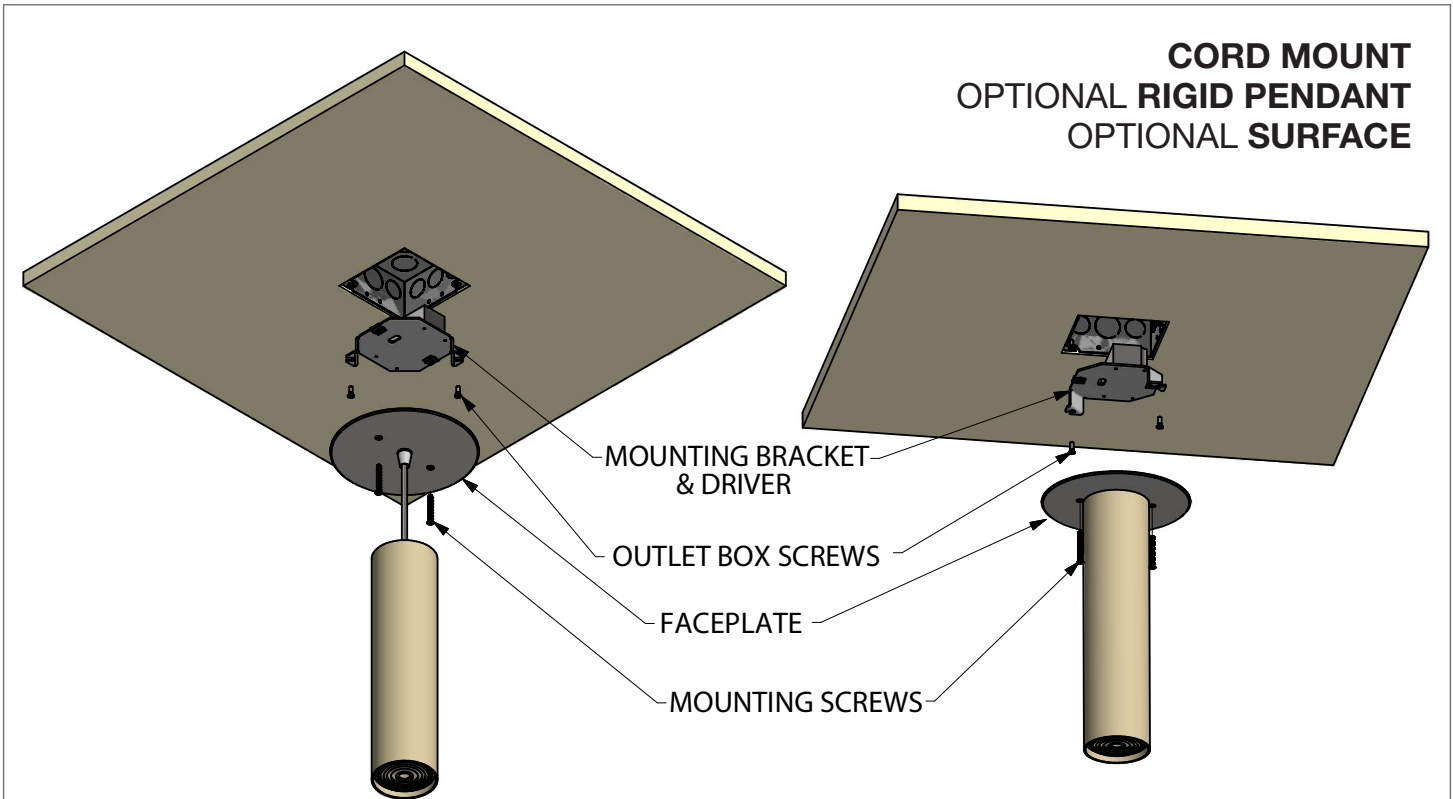


### READ ALL INSTRUCTIONS BEFORE INSTALLATION

1. REMOVE FACEPLATE AND LED ASSEMBLY FROM 4" SQ OUTLET BOX.
2. MOUNT OUTLET BOX FLUSH TO CEILING SURFACE. IN ORIENTATION SHOWN.
3. CONNECT SUPPLY WIRES TO DRIVER INPUT WIRES.
4. CONNECT DRIVER OUTPUT WIRES AS FOLLOWS: CONNECT RED WIRE FROM DRIVER TO WHITE WIRE FROM CYLINDER. CONNECT BLACK WIRE FROM DRIVER TO BLACK WIRE FROM CYLINDER.
5. INSERT DRIVER & MOUNTING BRACKET INTO BOX, ALIGNING HOLES WITH OUTLET BOX AND SECURE USING SUPPLIED SCREWS.
6. ALIGN AND ATTACH FACEPLATE TO MOUNTING BRACKET AND SECURE USING SUPPLIED FASTENERS.

**INSTALL IN ACCORDANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRIC CODES**  
**INSTALL IN ACCORDANCE WITH ALL MARKINGS APPEARING ON OR INSIDE LUMINAIRES**  
**FOR OUTDOOR INSTALLATIONS, USE SILICONE TO CAULK AROUND ALL EXPOSED SEAMS**

## 3x12 CYLINDER WALL MOUNT INSTALLATION INSTRUCTIONS

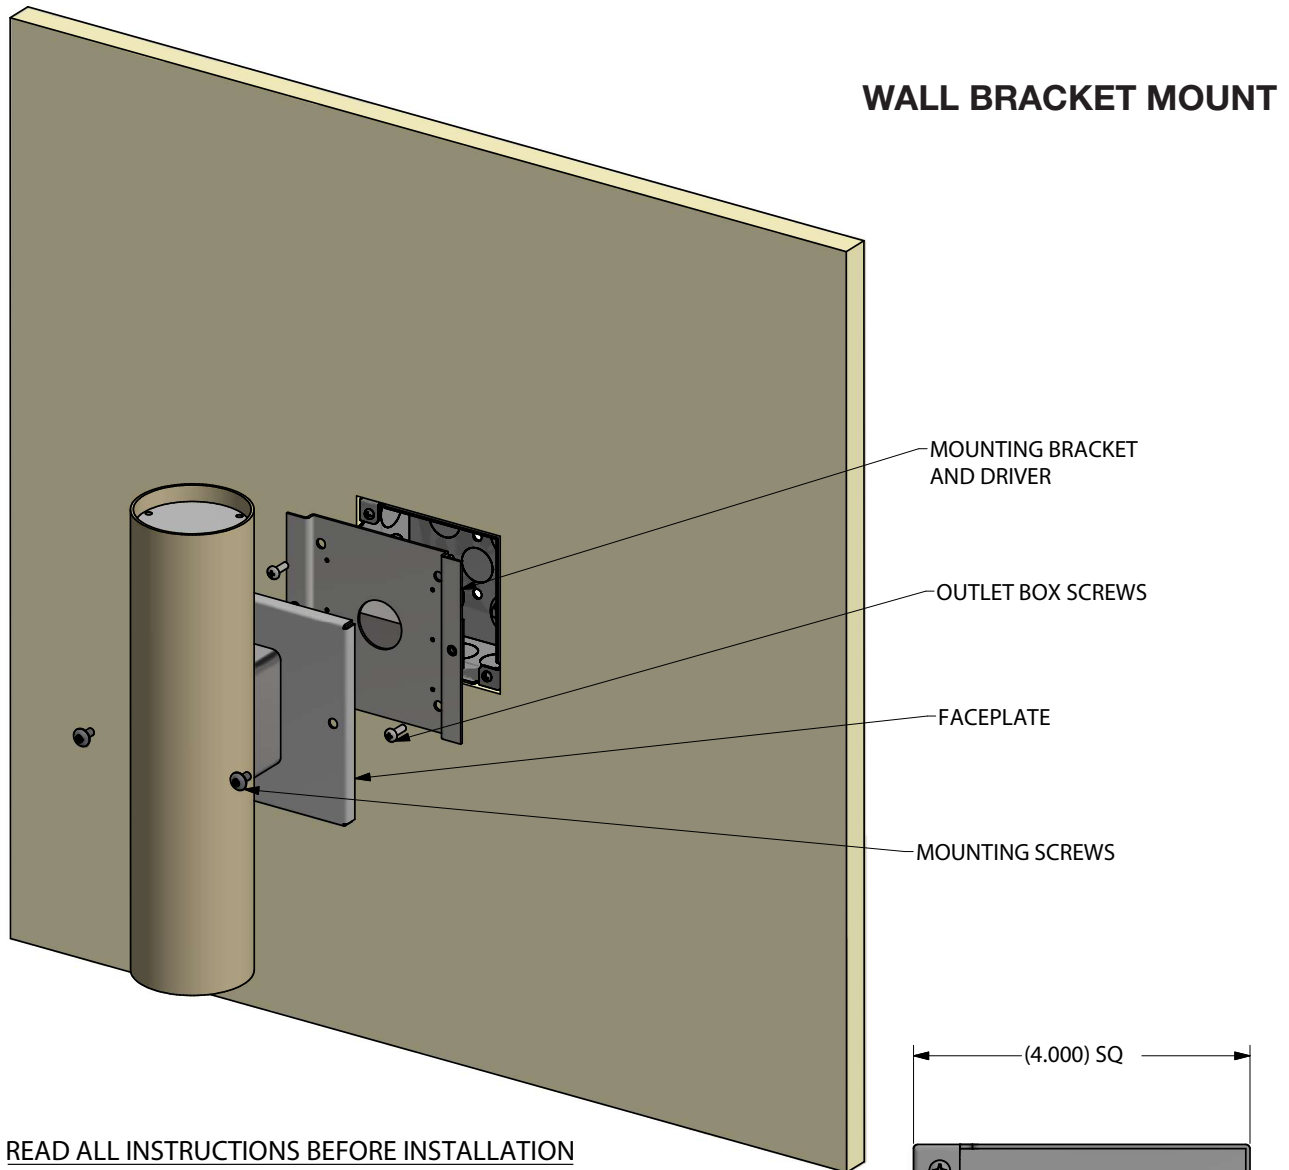

### READ ALL INSTRUCTIONS BEFORE INSTALLATION

1. REMOVE FACEPLATE AND LED ASSEMBLY FROM 4" SQ OUTLET BOX.
2. MOUNT OUTLET BOX FLUSH TO WALL SURFACE. IN ORIENTATION SHOWN.
3. CONNECT SUPPLY WIRES TO DRIVER INPUT WIRES.
4. INSERT DRIVER & MOUNTING BRACKET INTO BOX, ALIGNING HOLES WITH OUTLET BOX AND SECURE USING SUPPLIED SCREWS.
5. ALIGN AND ATTACH FACEPLATE TO MOUNTING BRACKET AND SECURE USING SUPPLIED FASTENERS.

**INSTALL IN ACCORDANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRIC CODES  
INSTALL IN ACCORDANCE WITH ALL MARKINGS APPEARING ON OR INSIDE LUMINAIRES  
FOR OUTDOOR INSTALLATIONS, USE SILICONE TO CAULK AROUND ALL EXPOSED SEAMS**